


ABS SENSOR

RPM SENSORS
CONNECTION CABLES

ABS/EBS EXTENSION CABLES
CALIPER EXTENSION CABLES
BRAKE PAD WEAR SENSORS

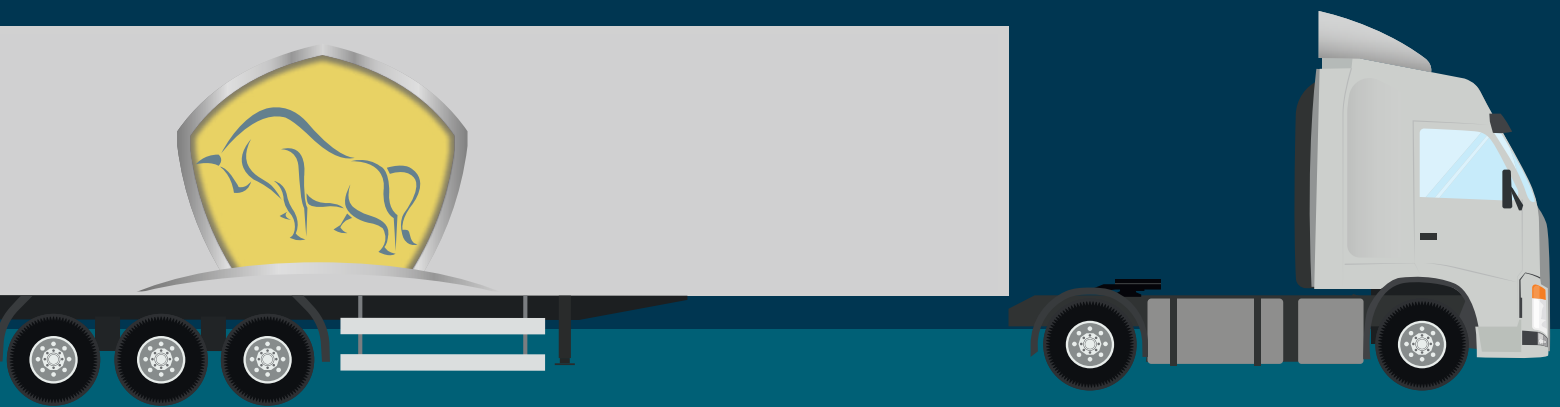



160-630040.00		40 cm - "L" Head	
To fit			
WABCO	441 032 808 0	IVECO	5801115879
BPW	02.3317.70.50.0		9441032808
FRUEHAUF	CF102959	RENAULT	5010604322
KÖGEL	80376		5021170122
MB	002 542 31 18	DAF	1315698
SCANIA	1934568		1504951
SETRA	7.788.075.000	SCHMITZ	050 019
			056 718



160-630035.10		35 cm - "I" Head	
To fit			
WABCO	441 032 905 0	DAF	1506004
BPW	02.3317.07.00		1506007
FRUEHAUF	CF104083	MAN	N2255200060
KÖGEL	650053		N2255200062
KRONE	505820819	VOLVO	WA4410329050
RENAULT	5021170124		WA4410329632
SCANIA	1784590		4240468



160-630100.00		100 cm - "L" Head	
To fit			
WABCO	441 032 879 0		
DAF	1506003		
SAF	4.029.1064.00		



160-630100.10		100 cm - "I" Head	
To fit			
WABCO	441 032 573 0		
DAF	1505211		
MAN	ZG005580007		



160-630150.00		150 cm - "L" Head	
To fit			
WABCO	441 032 851 0		
MERCEDES	002 542 22 18		
	002 542 25 18		



160-630150.10		150 cm - "I" Head	
To fit			
WABCO	441 032 382 0		
MERCEDES	006 542 76 18		



160-630126.00		126 cm - "L" Head	
To fit			
WABCO	441 032 821 0		
MERCEDES	001 542 76 18		
	001 542 78 18		



160-630200.00		200 cm - "L" Head	
To fit			
WABCO	441 032 823 0		
DAF	1518008		
MERCEDES	001 542 96 18		
	001 542 87 18		



NEW




with plastic INJECTION PLUG

160-630040.00F 40 cm - "L" Head

To fit			
WABCO	441 032 808 0	IVECO	5801115879
BPW	02.3317.70.50.0		9441032808
FRUEHAUF	CF102959	RENAULT	5010604322
KÖGEL	80376		5021170122
MB	002 542 31 18	DAF	1315698
SCANIA	1934568		1504951
SETRA	7.788.075.000	SCHMITZ	050 019
			056 718


NEW



with plastic INJECTION PLUG


160-630035.10K 35 cm - "I" Head

To fit			
WABCO	441 032 905 0	DAF	1506004
BPW	02.3317.07.00		1506007
FRUEHAUF	CF104083	MAN	N2255200060
KÖGEL	650053		N2255200062
KRONE	505820819	VOLVO	WA4410329050
RENAULT	5021170124		WA4410329632
SCANIA	1784590		4240468



**160-638205.10
205 cm - "I" Head**

To fit	
WABCO	441 032 980 0



**160-6486101.00
150 cm - "L" Head**

To fit	
WABCO	048 600 001 0



**160-630040.00M
40 cm - "L" Head**

To fit	
WABCO	6505400217

	160-630250.10 250 cm - "I" Head			160-630300.10 300 cm - "I" Head	
	To fit	WABCO		441 032 920 0	To fit
				441 035 926 2	
DAF		1518009		441 032 487 0	
				441 032 942 0	
MERCEDES		002 542 37 18	MAN	81.27120.6005	
	160-631145.11 145 cm - "I" Head			160-631150.01 150 cm - "L" Head	
	To fit	WABCO		441 032 765 0	To fit
MERCEDES		356 540 06 17	MERCEDES	000 540 34 17	
	160-632215.01 215 cm - "L" Head			160-633215.01 215 cm - "L" Head	
	To fit	KNORR		0 486 000 256	To fit
MAN		81.27120.6165	MAN	81.27120.6164	
	160-632200.12 200 cm - "I" Head			160-633200.12 200 cm - "I" Head	
	To fit	WABCO		441 032 283 0	To fit
		441 032 296 0		441 032 297 0	
MAN		81.27120.6182	MAN	81.27120.6183	
				81.27120.6120	
	160-632260.12 260 cm - "I" Head			160-633260.12 260 cm - "I" Head	
	To fit	WABCO		441 032 285 0	To fit
		441 032 298 0		441 032 299 0	
MAN		81 27120 61 84	MAN	81 27120 61 85	

	160-632300.10 300 cm - "I" Head			160-633300.10 300 cm - "I" Head			
	To fit	WABCO		441 032 987 0	To fit	WABCO	441 032 988 0
				441 035 343 0			884 016 892 0
				884 016 891 0			
		MAN		81.27120.6105		MAN	81.27120.6106
	160-632150.01 150 cm - "L" Head			160-633150.01 150 cm - "L" Head			
	To fit	KNORR		0 486 000 250	To fit	KNORR	0 486 000 251
		MAN		81.27120.6177		MAN	81.27120.6176
	160-632280.01 280 cm - "L" Head			160-633280.01 280 cm - "L" Head			
	To fit	KNORR		0 486 000 258	To fit	KNORR	0 486 000 259
		MAN		81.27120.6171		MAN	81.27120.6170
	160-634140.01 140 cm - "L" Head			160-635140.01 140 cm - "L" Head			
	To fit	WABCO		441 032 783 0	To fit	WABCO	441 032 784 0
		RENAULT		5010143030		RENAULT	5010143029
		KNORR		0 265 050 110		KNORR	0 265 050 109
	160-636320.01 320 cm - "L" Head			160-637280.01 280 cm - "L" Head			
	To fit	KNORR		0 486 000 114	To fit	KNORR	0 486 000 115
		RENAULT		5010457299		RENAULT	5010457300

	160 -636175.10 175 cm - "I" Head			160-637245.10 245 cm - "I" Head			
	To fit	WABCO		441 032 995 0	To fit	WABCO	441 032 996 0
		RENAULT		5010457874		RENAULT	5010 457 875
				74 21 363 474		VOLVO	21363475
		VOLVO		20723702			
				21363474			
	160 -636395.10 395 cm - "I" Head			160-637395.10 150 cm - "I" Head			
	To fit	WABCO		441 032 347 0	To fit	WABCO	441 032 348 0
		RENAULT		5010457861		RENAULT	5010457870
				74 20 915 970			74 20 915 973
		VOLVO		21363488			74 21 363 492
						VOLVO	20732820
			20915973				
			21363492				
	160 -636555.10 555 cm - "I" Head			160-637555.10 555 cm - "I" Head			
	To fit	WABCO		441 032 349 0	To fit	WABCO	441 032 350 0
		RENAULT		5010457871		RENAULT	5010457876
				74 20 916 171			74 20 916 173
				74 21 363 493		VOLVO	20732822
		VOLVO		20732821			20916173
	20916171		21363495				
	21363493						
	160 -636265.10 265 cm - "I" Head			160-637265.10 265 cm - "I" Head			
	To fit	WABCO		441 032 386 0	To fit	WABCO	441 032 387 0
		VOLVO		21247147		VOLVO	21247154
				20528660			20528661
	160 -636220.00 220 cm - "L" Head			160-637250.00 250 cm - "L" Head			
	To fit	WABCO		441 032 148 0	To fit	WABCO	441 032 149 0
		RENAULT		5010457882		RENAULT	5010457883
		VOLVO		213 634 78		RENAULT	213 634 79













	160-642106.00 106 cm - "L" Head			160-643142.00 142 cm - "L" Head			
	To fit	WABCO		441 032 867 0	To fit	WABCO	441 032 870 0
		SCANIA		189 2047		SCANIA	189 2051
				153 0690			153 0696
				142 8446			153 4527
	160-642267.00 267 cm - "L" Head			160-643273.00 273 cm - "L" Head			
	To fit	WABCO		441 032 868 0	To fit	WABCO	441 032 865 0
		SCANIA		189 2048		SCANIA	189 2053
				153 0692			153 0699
				142 8447			
	160-642142.10 142 cm - "I" Head			160-643142.10 142 cm - "I" Head			
	To fit	WABCO		441 032 909 0	To fit	WABCO	441 032 908 0
		SCANIA		189 2049		SCANIA	1892054
				1530693			1530700
				1431119			1534518
				1360615	1431120		
	160-642267.10 267 cm - "I" Head			160-643267.10 267 cm - "I" Head			
	To fit	WABCO		441 032 925 0	To fit	WABCO	441 032 924 0
		SCANIA		1892050		SCANIA	153 0701
				153 0694			
	160-636174.10 174 cm - "I" Head			160-637270.10 270 cm - "I" Head			
	To fit	WABCO		441 032 993 2	To fit	WABCO	441 032 901 0
		SCANIA		1482006		SCANIA	1428451
				1482007			1428452
				1530704		1438785	1438786
				1531360		1530705	1534522
	1892057	1534525	1892058				

	<p>160-636280.00 280 cm - "L" Head</p> <table border="1"> <tr> <td rowspan="3">To fit</td> <td>WABCO</td> <td>441 032 117 0</td> </tr> <tr> <td>RENAULT</td> <td>154 7687</td> </tr> <tr> <td></td> <td>142 8453</td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	To fit	WABCO	441 032 117 0	RENAULT	154 7687		142 8453											<p>160-636340.10 340 cm - "I" Head</p> <table border="1"> <tr> <td rowspan="2">To fit</td> <td>WABCO</td> <td>441 032 903 0</td> </tr> <tr> <td>SCANIA</td> <td>189 2059</td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	To fit	WABCO	441 032 903 0	SCANIA	189 2059									
To fit	WABCO		441 032 117 0																														
	RENAULT		154 7687																														
		142 8453																															
To fit	WABCO	441 032 903 0																															
	SCANIA	189 2059																															
	<p>160-639200.10 200 cm - "I" Head</p> <table border="1"> <tr> <td rowspan="2">To fit</td> <td>KNORR</td> <td>0 486 001 042</td> </tr> <tr> <td>MAN</td> <td>81.27120.6146</td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	To fit	KNORR	0 486 001 042	MAN	81.27120.6146											<p>160-640200.10 200 cm - "I" Head</p> <table border="1"> <tr> <td rowspan="3">To fit</td> <td>KNORR</td> <td>0 486 001 041</td> </tr> <tr> <td>MAN</td> <td>81.27120.6147</td> </tr> <tr> <td></td> <td>81.27120.6060</td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	To fit	KNORR	0 486 001 041	MAN	81.27120.6147		81.27120.6060									
To fit	KNORR		0 486 001 042																														
	MAN	81.27120.6146																															
To fit	KNORR	0 486 001 041																															
	MAN	81.27120.6147																															
		81.27120.6060																															
	<p>160-639355.01 355 cm - "L" Head</p> <table border="1"> <tr> <td rowspan="2">To fit</td> <td>KNORR</td> <td>0 486 000 245</td> </tr> <tr> <td>MAN</td> <td>81.27120.6160</td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	To fit	KNORR	0 486 000 245	MAN	81.27120.6160											<p>160-640355.01 355 cm - "L" Head</p> <table border="1"> <tr> <td rowspan="2">To fit</td> <td>KNORR</td> <td>0 486 000 246</td> </tr> <tr> <td>MAN</td> <td>81.27120.6161</td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	To fit	KNORR	0 486 000 246	MAN	81.27120.6161											
To fit	KNORR		0 486 000 245																														
	MAN	81.27120.6160																															
To fit	KNORR	0 486 000 246																															
	MAN	81.27120.6161																															
	<p>160-639200.01 200 cm - "L" Head</p> <table border="1"> <tr> <td rowspan="2">To fit</td> <td>KNORR</td> <td>0 486 000 241</td> </tr> <tr> <td>MAN</td> <td>81.27120.6156</td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	To fit	KNORR	0 486 000 241	MAN	81.27120.6156											<p>160-640200.01 200 cm - "L" Head</p> <table border="1"> <tr> <td rowspan="2">To fit</td> <td>KNORR</td> <td>0 486 000 242</td> </tr> <tr> <td>MAN</td> <td>81.27120.6157</td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	To fit	KNORR	0 486 000 242	MAN	81.27120.6157											
To fit	KNORR		0 486 000 241																														
	MAN	81.27120.6156																															
To fit	KNORR	0 486 000 242																															
	MAN	81.27120.6157																															
	<p>160-640130.01 130 cm - "L" Head</p> <table border="1"> <tr> <td rowspan="2">To fit</td> <td>KNORR</td> <td>0 486 000 239</td> </tr> <tr> <td>MAN</td> <td>81.27120.6150</td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	To fit	KNORR	0 486 000 239	MAN	81.27120.6150											<p>160-630040.13 40 cm - "I" Head</p> <table border="1"> <tr> <td rowspan="5">To fit</td> <td>WABCO</td> <td>441 035 001 0</td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> </table>	To fit	WABCO	441 035 001 0													
To fit	KNORR		0 486 000 239																														
	MAN	81.27120.6150																															
To fit	WABCO	441 035 001 0																															













	<p>160-638205.00 205 cm - "L" Head</p> <table border="1"> <tr> <td>WABCO</td> <td>441 032 858 0</td> </tr> <tr> <td>IVECO</td> <td>4120 0561</td> </tr> <tr> <td>To fit</td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> </table>	WABCO	441 032 858 0	IVECO	4120 0561	To fit									<p>160-631290.01 290 cm - "L" Head</p> <table border="1"> <tr> <td>WABCO</td> <td>441 032 623 0</td> </tr> <tr> <td>MB</td> <td>357 540 03 17</td> </tr> <tr> <td>DAF</td> <td>1518002</td> </tr> <tr> <td>To fit</td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> </table>	WABCO	441 032 623 0	MB	357 540 03 17	DAF	1518002	To fit																					
	WABCO	441 032 858 0																																									
IVECO	4120 0561																																										
To fit																																											
WABCO	441 032 623 0																																										
MB	357 540 03 17																																										
DAF	1518002																																										
To fit																																											
	<p>160-691300.38 300 cm - EBS Extension cable</p> <table border="1"> <tr> <td>WABCO</td> <td>449 723 030 0</td> </tr> <tr> <td>To fit</td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> </table>	WABCO	449 723 030 0	To fit									<p>160-691400.38 400 cm - EBS Extension cable</p> <table border="1"> <tr> <td>WABCO</td> <td>449 723 040 0</td> </tr> <tr> <td>To fit</td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> </table>	WABCO	449 723 040 0	To fit																											
	WABCO	449 723 030 0																																									
To fit																																											
WABCO	449 723 040 0																																										
To fit																																											
	<p>160-630380.38 380 cm - Extension cable</p> <table border="1"> <tr> <td>WABCO</td> <td>449 712 038 0</td> </tr> <tr> <td>DAF</td> <td>1505060</td> </tr> <tr> <td>FRUEHAUF</td> <td>1H312779603</td> </tr> <tr> <td>KRONE</td> <td>58113130</td> </tr> <tr> <td>MAN</td> <td>N2255200065</td> </tr> <tr> <td>RENAULT</td> <td>50 21 170 144</td> </tr> <tr> <td>SCANIA</td> <td>1912313</td> </tr> <tr> <td>SCHMITZ</td> <td>051 214</td> </tr> <tr> <td>SETRA</td> <td>7.788.085.000</td> </tr> <tr> <td>To fit</td> <td></td> </tr> </table>	WABCO	449 712 038 0	DAF	1505060	FRUEHAUF	1H312779603	KRONE	58113130	MAN	N2255200065	RENAULT	50 21 170 144	SCANIA	1912313	SCHMITZ	051 214	SETRA	7.788.085.000	To fit			<p>160-630510.38 510 cm - Extension cable</p> <table border="1"> <tr> <td>WABCO</td> <td>449 712 051 0</td> </tr> <tr> <td>DAF</td> <td>1505061</td> </tr> <tr> <td>KÖGEL</td> <td>330419</td> </tr> <tr> <td>KRONE</td> <td>58110890</td> </tr> <tr> <td>RENAULT</td> <td>50 21 170 145</td> </tr> <tr> <td>SCANIA</td> <td>1784591</td> </tr> <tr> <td>SCHMITZ</td> <td>051 368</td> </tr> <tr> <td>SETRA</td> <td>7.788.086.000</td> </tr> <tr> <td></td> <td>7.176.023.000</td> </tr> <tr> <td>To fit</td> <td></td> </tr> </table>	WABCO	449 712 051 0	DAF	1505061	KÖGEL	330419	KRONE	58110890	RENAULT	50 21 170 145	SCANIA	1784591	SCHMITZ	051 368	SETRA	7.788.086.000		7.176.023.000	To fit	
	WABCO	449 712 038 0																																									
DAF	1505060																																										
FRUEHAUF	1H312779603																																										
KRONE	58113130																																										
MAN	N2255200065																																										
RENAULT	50 21 170 144																																										
SCANIA	1912313																																										
SCHMITZ	051 214																																										
SETRA	7.788.085.000																																										
To fit																																											
WABCO	449 712 051 0																																										
DAF	1505061																																										
KÖGEL	330419																																										
KRONE	58110890																																										
RENAULT	50 21 170 145																																										
SCANIA	1784591																																										
SCHMITZ	051 368																																										
SETRA	7.788.086.000																																										
	7.176.023.000																																										
To fit																																											
	<p>160-630200.38 300 cm - ABS Extension cable</p> <table border="1"> <tr> <td>WABCO</td> <td>449 712 020 0</td> </tr> <tr> <td>To fit</td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> </table>	WABCO	449 712 020 0	To fit									<p>160-638400.KN 400 cm - EBS Extension cable</p> <table border="1"> <tr> <td>To fit</td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> </table>	To fit																													
	WABCO	449 712 020 0																																									
To fit																																											
To fit																																											
	<p>160-690015.48 15 cm Connection Cable</p> <table border="1"> <tr> <td>VOLVO</td> <td>20382517</td> </tr> <tr> <td>SCANIA</td> <td>1741865</td> </tr> <tr> <td>To fit</td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> </table>	VOLVO	20382517	SCANIA	1741865	To fit							<p>160-690020.44 20 cm Connection Cable</p> <table border="1"> <tr> <td>WABCO</td> <td>894 601 132 2</td> </tr> <tr> <td>SCANIA</td> <td>1774426</td> </tr> <tr> <td></td> <td>1802092</td> </tr> <tr> <td>RENAULT</td> <td>5021170262</td> </tr> <tr> <td>To fit</td> <td></td> </tr> </table>	WABCO	894 601 132 2	SCANIA	1774426		1802092	RENAULT	5021170262	To fit																					
	VOLVO	20382517																																									
SCANIA	1741865																																										
To fit																																											
WABCO	894 601 132 2																																										
SCANIA	1774426																																										
	1802092																																										
RENAULT	5021170262																																										
To fit																																											



	160-690050.46 50 cm Connection Cable			160-690070.46 70 cm Connection Cable	
	To fit	WABCO 894 601 139 2		To fit	
	160-690062.60 62 cm Connection Cable			160-690073.61 73 cm Connection Cable	
	To fit	VOLVO 3173087		To fit	VOLVO 20498611
	160-690080.45 80 cm Connection Cable			160-674175.47 175 cm Caliper Extension Cable	
	To fit	WABCO 894 601 138 2		To fit	MAN 81.25429.6894
	160-675175.47 175 cm Caliper Extension Cable			160-672030.47 30 cm Caliper Extension Cable	
	To fit	MAN 81.25429.6893		To fit	WABCO 449 756 003 0
	160-672250.47 250 cm Caliper Extension Cable			160-672150.47A 150 cm Caliper Extension Cable	
	To fit	WABCO 449 756 025 0		To fit	WABCO 449 725 015 0



	<p>160-661091.04 90 cm - RPM Sensor</p> <table border="1"> <tr> <td rowspan="2">To fit</td> <td>MAN</td> <td>51.27120.0014</td> </tr> <tr> <td>BOSCH</td> <td>0 281 002 426</td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	To fit	MAN	51.27120.0014	BOSCH	0 281 002 426														<p>160-662091.04 90 cm - RPM Sensor</p> <table border="1"> <tr> <td rowspan="2">To fit</td> <td>MAN</td> <td>51.27120.0015</td> </tr> <tr> <td>BOSCH</td> <td>0 281 002 427</td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	To fit	MAN	51.27120.0015	BOSCH	0 281 002 427												
To fit	MAN		51.27120.0014																																		
	BOSCH	0 281 002 426																																			
To fit	MAN	51.27120.0015																																			
	BOSCH	0 281 002 427																																			
	<p>160-663042.04 40 cm - RPM Sensor</p> <table border="1"> <tr> <td rowspan="4">To fit</td> <td>WABCO</td> <td>441 032 868 0</td> </tr> <tr> <td>SCANIA</td> <td>189 2048</td> </tr> <tr> <td></td> <td>153 0692</td> </tr> <tr> <td></td> <td>142 8447</td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	To fit	WABCO	441 032 868 0	SCANIA	189 2048		153 0692		142 8447								<p>160-663043.04 40 cm - RPM Sensor</p> <table border="1"> <tr> <td rowspan="4">To fit</td> <td>WABCO</td> <td>441 032 865 0</td> </tr> <tr> <td>SCANIA</td> <td>189 2053</td> </tr> <tr> <td></td> <td>153 0699</td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	To fit	WABCO	441 032 865 0	SCANIA	189 2053		153 0699												
To fit	WABCO		441 032 868 0																																		
	SCANIA		189 2048																																		
			153 0692																																		
		142 8447																																			
To fit	WABCO	441 032 865 0																																			
	SCANIA	189 2053																																			
		153 0699																																			
	<p>160-631150.03 150 cm - RPM Sensor</p> <table border="1"> <tr> <td rowspan="6">To fit</td> <td>MB</td> <td>001 153 02 20</td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> </table>	To fit	MB	001 153 02 20												<p>160-631151.03 150 cm - RPM Sensor</p> <table border="1"> <tr> <td rowspan="6">To fit</td> <td>MB</td> <td>001 153 04 20</td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> </table>	To fit	MB	001 153 04 20																		
To fit	MB		001 153 02 20																																		
To fit	MB	001 153 04 20																																			
	<p>160-665040.06 40 cm - RPM Sensor</p> <table border="1"> <tr> <td rowspan="4">To fit</td> <td>DAF - TEMSA</td> <td>1607435</td> </tr> <tr> <td>BOSCH</td> <td>0 281 002 675</td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	To fit	DAF - TEMSA	1607435	BOSCH	0 281 002 675												<p>160-665032.07 32 cm - RPM Sensor</p> <table border="1"> <tr> <td rowspan="4">To fit</td> <td>DAF - TEMSA</td> <td>1607436</td> </tr> <tr> <td>BOSCH</td> <td>0 281 002 676</td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	To fit	DAF - TEMSA	1607436	BOSCH	0 281 002 676														
To fit	DAF - TEMSA		1607435																																		
	BOSCH		0 281 002 675																																		
To fit	DAF - TEMSA	1607436																																			
	BOSCH	0 281 002 676																																			
	<p>160-664190.05 190 cm - RPM Sensor</p> <table border="1"> <tr> <td rowspan="6">To fit</td> <td>SCANIA</td> <td>1457304</td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> </table>	To fit	SCANIA	1457304												<p>160-648190.05 190 cm - RPM Sensor</p> <table border="1"> <tr> <td rowspan="6">To fit</td> <td>SCANIA</td> <td>1471738</td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> </table>	To fit	SCANIA	1471738																		
To fit	SCANIA		1457304																																		
To fit	SCANIA	1471738																																			

	<p>160-672080.50 80 cm Brake Pad Wear Sensor</p> <table border="1"> <tr> <td>VOLVO</td> <td>20928532</td> </tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>	VOLVO	20928532																<p>160-672150.50 150 cm Brake Pad Wear Sensor</p> <table border="1"> <tr> <td>VOLVO</td> <td>20928533</td> </tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>	VOLVO	20928533														
VOLVO	20928532																																		
VOLVO	20928533																																		
	<p>160-673260.50 260 cm Brake Pad Wear Sensor</p> <table border="1"> <tr> <td>VOLVO</td> <td>20928536</td> </tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>	VOLVO	20928536																<p>160-673261.50 261 cm Brake Pad Wear Sensor</p> <table border="1"> <tr> <td>VOLVO</td> <td>20928537</td> </tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>	VOLVO	20928537														
VOLVO	20928536																																		
VOLVO	20928537																																		
	<p>160-673156.50 156 cm Brake Pad Wear Sensor</p> <table border="1"> <tr> <td>VOLVO</td> <td>20928539</td> </tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>	VOLVO	20928539																<p>160-673157.50 157 cm Brake Pad Wear Sensor</p> <table border="1"> <tr> <td>VOLVO</td> <td>20928541</td> </tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>	VOLVO	20928541														
VOLVO	20928539																																		
VOLVO	20928541																																		
	<p>160-673185.50 185 cm Brake Pad Wear sensor</p> <table border="1"> <tr> <td>VOLVO</td> <td>20928544</td> </tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>	VOLVO	20928544																<p>160-673186.50 186 cm Brake Pad Wear sensor</p> <table border="1"> <tr> <td>VOLVO</td> <td>20928545</td> </tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>	VOLVO	20928545														
VOLVO	20928544																																		
VOLVO	20928545																																		
	<p>160-676128.50 128 cm Brake Pad Wear sensor</p> <table border="1"> <tr> <td>RENAULT</td> <td>7420928552</td> </tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>	RENAULT	7420928552																<p>160-677128.50 128 cm Brake Pad Wear sensor</p> <table border="1"> <tr> <td>RENAULT</td> <td>7420928553</td> </tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>	RENAULT	7420928553														
RENAULT	7420928552																																		
RENAULT	7420928553																																		



	<p>160-76360.50 360 cm Brake Pad Wear Sensor</p> <table border="1"> <tr> <td>RENAULT</td> <td>7420928559</td> </tr> <tr> <td>To fit</td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> </table>	RENAULT	7420928559	To fit											<p>160-677520.50 520 cm Brake Pad Wear Sensor</p> <table border="1"> <tr> <td>RENAULT</td> <td>7420928560</td> </tr> <tr> <td>To fit</td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> </table>	RENAULT	7420928560	To fit									
RENAULT	7420928559																										
To fit																											
RENAULT	7420928560																										
To fit																											
	<p>160-670292.50 292 cm Brake Pad Wear Sensor</p> <table border="1"> <tr> <td>RENAULT</td> <td>5001856031</td> </tr> <tr> <td>To fit</td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> </table>	RENAULT	5001856031	To fit											<p>160-671243.50 243 cm Brake Pad Wear Sensor</p> <table border="1"> <tr> <td>RENAULT</td> <td>5001856032</td> </tr> <tr> <td>To fit</td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> </table>	RENAULT	5001856032	To fit									
RENAULT	5001856031																										
To fit																											
RENAULT	5001856032																										
To fit																											
	<p>160-678140.50 140 cm Brake Pad Wear Sensor</p> <table border="1"> <tr> <td>RENAULT</td> <td>5001856033</td> </tr> <tr> <td>To fit</td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> </table>	RENAULT	5001856033	To fit											<p>160-670140.50 140cm Brake Pad Wear Sensor</p> <table border="1"> <tr> <td>RENAULT</td> <td>5001856034</td> </tr> <tr> <td>To fit</td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> </table>	RENAULT	5001856034	To fit									
RENAULT	5001856033																										
To fit																											
RENAULT	5001856034																										
To fit																											
	<p>160-674175.50 175 cm Brake Pad Wear Sensor</p> <table border="1"> <tr> <td>MAN</td> <td>81259376041</td> </tr> <tr> <td>To fit</td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> </table>	MAN	81259376041	To fit											<p>160-675175.50 175 cm Brake Pad Wear Sensor</p> <table border="1"> <tr> <td>MAN</td> <td>81259376044</td> </tr> <tr> <td>To fit</td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> </table>	MAN	81259376044	To fit									
MAN	81259376041																										
To fit																											
MAN	81259376044																										
To fit																											
	<p>160-674135.50 135 cm Brake Pad Wear Sensor</p> <table border="1"> <tr> <td>MAN</td> <td>81259376039</td> </tr> <tr> <td>To fit</td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> <tr> <td></td> <td></td> </tr> </table>	MAN	81259376039	To fit																							
MAN	81259376039																										
To fit																											